



Constructing Placard Holders

If you have your Hazmat endorsement and are assigned a load, you will need **placard holders**. These can be picked up at mostly any terminal; however, if you are in need of them while out on the road, here's instruction on how to make them.

- STEP 1:** Locate your nearest hardware store with accessible and safe parking options.
- STEP 2:** Find a 2' x 2' piece of plywood and an 8' long piece of 2' x 4'.
- STEP 3:** Most stores will cut and even nail the holder together for you. Have the attendant cut the pieces as shown below. This will give you four, 1' x 1' squares and at least four, 1 1/2 - 2 foot long 2 x 4's.
- STEP 4:** Position the 1' x 1' piece of plywood in a diamond formation onto the 2' holder.

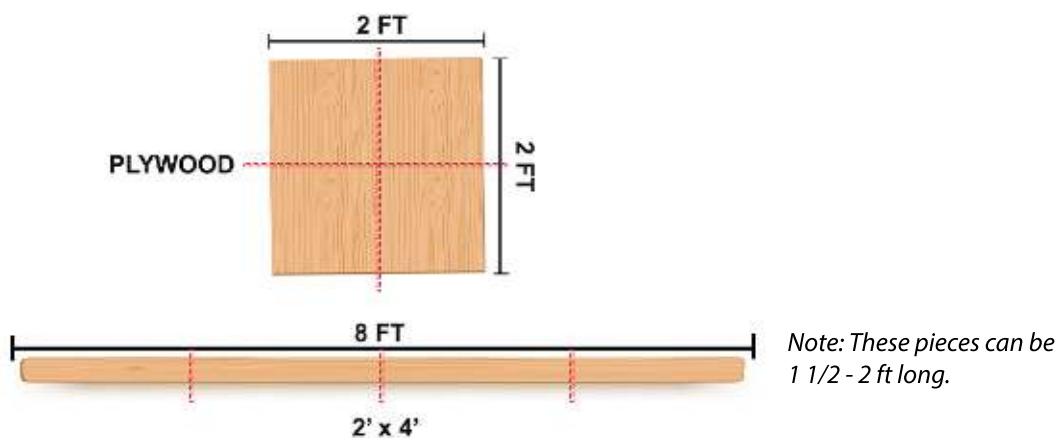

- STEP 5:** Once nailed and fully assembled, place the provided placard onto the diamond-shaped plywood.

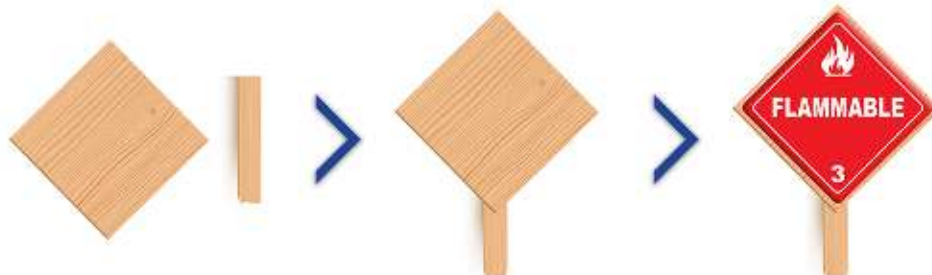

- STEP 6:** Tape around the far edges of the placard to ensure it will not fly off. New plywood can be difficult to adhere the placards to. The green shaded area below shows the proper place to tape the placard if you're using a solid tape such as duct tape. No solid tape should be placed more inward than the white outline. If you're using clear tape, exceeding this area is allowed as long as the placard is not damaged.

